

Controls for frequency response and auxiliary processing:

- HIGH** knob: -26 to +9
- MID** knob: -26 to +9
- LOW** knob: -26 to +9
- AUX** knob
- PFL** knob
- BYPAS** switch
- A** and **B** buttons

Vertical slider control:

- Scale: 0 to 10
- Knob with horizontal bar

DSP FX section:

- BEAT** controls: 1/2, 3/4, 1, 2/1, 4/1
- CF ASSIGN** buttons: 1, 2, 3, 4
- B** button

Central control panel:

- MASTER** knob: -10 to +10
- AUX** knob
- RTN** knob: MIN to MAX
- SEND** knob: MIN to MAX
- FLANGER** knob
- AUTO FILTER** knob
- REVERB** knob
- ECHO** knob
- DELAY** knob
- PITCH SHIFTER** knob
- CH SELECT** knob: 1 to 4
- MIC** knob
- CF A** knob
- CF B** knob
- MASTER** knob
- MIX** knob: MIN to MAX
- FX ON/OFF** switch
- FX TIME** knob

10


12

14

16

18

20

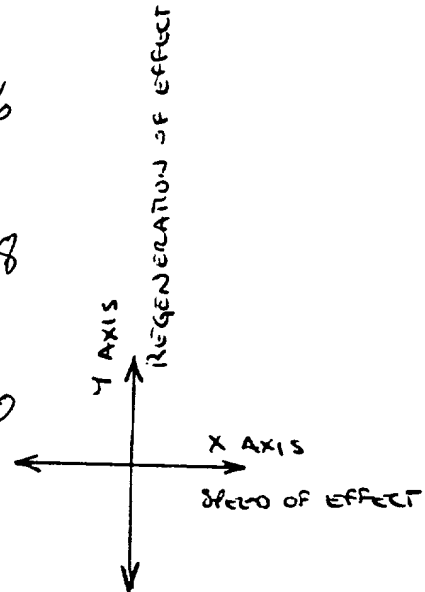

"TRACKBALL CONTROLLER"